INSTRUCTION MANUAL

Namron Zigbee Termostat 16A

220-240V~ 50Hz

C E 💋 zigbee 💆

namron

Symbol overview



- 1. Zigbee Networking icon
- 2. Children Lock
- 3. Frost Protection
- 4. Manual Mode
- 5. Program Mode
- 6. Period Program
- 7. Temperature/Time
- 8. Internal room temperature
- 9. External room temperature
- 10. Floor Temperature
- 11. Regulator mode
- 12. Heating mode

Installation

The thermostat is applied to full load in areas with the altitude of less than 2500m above sea level. Power rating of external load should be less than or equal to 80% rated power of the thermostat in areas with altitude of 2500m to 4200m.

WARNING

- a. Installation must be carried by a qualified electrician.
- b. Before installation, please check whether it conforms to local electric standards.
- C. Power supply must be turn off when install and clean the thermostat. Wipe the surface dust or dirt with soft cloth or tissue, do not use the detergent or
- other corrosive chemical solution.
- Please match with the standard wall box to ensure the installation.
- Do not connect the L&N, LO&NO reversely.
- Please place and protect the cover properly when it's in installation to avoid the damage.
- When connected to AC230V, the surface cover must be installed. Thermostat is not the SELV product, all the voltage part should be regarded as 230V.

Wiring Diagram





15. Open Window Detected

Heating/cooling dynamic ICONS
Targeted temperature

16. ECO mode

17. Percentage

22. Button"dow 23. Button"up" Button"down"

20. ON/OFF Button 21. Button"M"

Mounting

Technical Data

Input	230VAC+/-10%, 50/60Hz	
Max. Pre- fuse	16A	
Built-in Switch	1 Pole, 16A	
Relay contact	Max 16A 250VAC	
Output relay	16A, SPST-NO	
Floor sensor type / External room sensor	The thermostat can be configured as any of the following floor sensor: 3m, NTC, R25=10KΩ±1%@25C, B25/50=3950K±1% (default) 3m, NTC, R25=12KΩ±2%@25°C, B25/85=3740K±2% (support) 3m, NTC, R25=15KΩ±2%@25°C, B25/85=3740K±2% (support) 3m, NTC, R25=23KΩ±2%@25°C, B25/85=4090K±1.5% (support) 3m, NTC, R25=47KΩ±2%@25°C, B25/85=4090K±1.5% (support) 3m, NTC, R25=47KΩ±2%@25°C, B25/85=4090K±1.5% (support)	
Build-In sensor	NTC, R25=10KΩ±1%@25°C, B25/50=3950K±1%	
Network function:	Standard Zigbee 3.0 protocol.	
Wiring Requirements	Current≤13A-1.5mm², solid core wire, HO7V-R wire Current>13A to 16A-2.5mm², solid core wire, H07V-R wire	
Control object	Floor Heating	
Method of mounting	Wall mounted	
Control function	The thermostat has a build-in sensor and supplied with an floor sensor. Also the thermostat can be connected with an external room sensor. The thermostat can be set for the following functions: ■ Room temperature control ■ Floor temperature control ■ Floor sensor as an external limit sensor for internal room temperature control ■ Floor sensor as an external limit sensor for external room temperature controt ■ Floor sensor as an external limit sensor for external room temperature controt ■ Floor sensor as an external limit sensor for external room temperature controt ■ Floor sensor as an external limit sensor for external room temperature controt	
Control mode	①Manual Mode ②Weekly Program mode ③Regulator	
Frost Protection	Default 5°C to start frost protection,5~10°C controllable. Can be switched on/off manually	
Ambient temperature	10°C/+60°C	
External limitation	5~60°C (Default 27°C)	
Switch deviation	0.5~10°C adjustable (±1°C)	
Protection level	IP20	
Material of casing	PC Fire-rated	

Normal operation guidance

- 1. Short press the ON/OFF key to ON/OFF the backlight on the thermostat display. When it shows bon, means that backlight is ON, shows boFF, means OFF.
- 2. Long press the ON/OFF button 3s to ON/OFF the Thermostat
- 3. Under manual control or programmed control mode, short press button" M"to have mode change.
- 4. During the heating(not in regulator P mode), long press" M"2s to switch Lo to ELo mode.
- 5. During the normal mode(Not P mode), short press " \blacktriangle " or " \checkmark " to adjust the current temperature.
- 6. During the Programmed mode, short press" \blacktriangle " or" \checkmark " to adjust the contemporary time setting temperature which enter the temporary control
- mode. 7. In regulator P mode, short press"▲" or"▼!"to adjust the heating percentage of the current mode, short press"M" to confirm the setting.
- 8. Under main screen at any mode press hold the"M" and" ▲ "3s at same time to enter the date/time setting.
- 9. Under main screen at any mode press hold the "M" and "▼" 3s at same time to open/close child lock.

Advanced setting; Long press button "M" for 5seconds at any control mode

	0 1		
	Shown	code	confirm, short press M for V to select, long press M for I second to confirm, short press M for exit
1	[Rr	Air Temperature calibration	Check the Air temperature and calibration: -10~10°C (factory setting 0°C)
2	ERF	Floor Temperature calibration	Check the floor temperature and calibration: -10~10°C (factory setting 0°C)
3	ERE	External room temperature calibration	Measure and correct the temperature of the external room: -10~10°C (factory0°C)
4	SNod	Sensor mode	R A: Built-in sensor F F: Floor sensor (factory default) RF AF: Internal temperature control, floor temperature limit R2 A2: External room sensor R2F A2F: External room temperature control, floor temperature limit P P: Controller heating percentage
5	SEn	Sensor types	IDピ 10K: NTC_10K factory default i2ピ 12K: NTC_12K i5ピ 15K: NTC_15K 2ピ 22K: NTC_25K 3号 33K: NTC_33K Y1ピ 47K: NTC 47K
6	br l	display backlight brightness in working status	10~ 100%, 10% increasement, factory reset 100%
7	br2	display backlight brigthtness in standby status	10~ 100%, 10% increasement, factory reset 10%
8	FLE	Floor Limited temp.	5 - 60°C, factory setting 27°C
9	di F	On/Off differential	0.5-10°C, factory setting +1°C
10	Pr6	Weekly program setting	Pr 6 (12345/67: 5/2 (Flashing alternately) Pr 6 (12345/67: 6/1(Flashing alternately) Pr 63 1234567: 7/0 (Flashing)No rest Pr 64 1234567 All show up: All rest
11	LEP	Frost Protection	oFF Off: Frost protection off(default) When on: 5-10°C
12	rE6E	Regulator	Off: Turn regulator off 1-30min settable heating oFF schedule time. In total have 30 schedules can be set. (default 30min)
13	RdRP	Self- Adjust	Off: Self adaption function Off On: Self adaption function on (factory default OFF)
14	RLo	Lower limit of air sensor temperature	0.5~38°C (factory setting 5°C)
15	RH,	Upper limit of Air sensor temperature	2.5~40°C (factory setting 40°C)
16	FLo	Lower limit of Floor sensor temperature	0.5~38°C (factory setting 5°C)
17	FH,	Upper limit of Floor sensor temperature	2.5~40°C (factory setting 40°C)
18	ELo	Lower limit of external room sensor temperature	0.5~38°C (factory setting 5°C)
19	EH,	Upper limit of external room sensor temperature	2.5~40°C (factory setting 40°C)
20	nEt	Activate Zigbee in-network/off-network mode	Zigbee Inclusion: Make sure the device does not belong to any network. Enter advance setting find , • option and long press button M for 2s ready for inclusion,mean/hile set your Zigbee controller in inclusion mode. When the display shows ,a. the device is in inclusion status. The display will shows ,a. the device is in inclusion status. The display will shows ,a. the device of the controller in inclusion is successful. Frevill be showed when inclusion is failed. *For Homey inclusion please double press button"M" then it can be included. Zigbee exclusion: Enter advance setting, find eUt option and long press button M for 2s ready for exclusion,meanwhile set your Zigbee controller in exclusion mode. When the display shows a, means the device is in exclusion status. The display will shows £££ and the Zigbee logo @ is off means the exclusion is successful. <i>Frr</i> will be showed when exclusion is failed.
21	YNod	Operating mode Working mode	LooL: Cooling mode HERE HEAT: Heating mode (factory default)
22	98FE	Date display mode	ddกก DDMM: Day day/month month (factory setting) กกอง MMDD: Month month/day day
23	Ydo	Open window function	oFF Disable the open window function Enable the open window function (Factory Default)
24	FRE	Factory Reset	In the option, long press "M" 5s to go back to factory reset.
25	ESC	Exit advanced settings	Short press "M" to confirm and exit

BRUKSANVISNING

Namron Zigbee Termostat 16A

220-240V~ 50Hz

namr@n



Symbol overview



- 19. Måltemperatur 20. PÅ/AV-knapp
 - 21. "M"-knapp 22. "Ned"-knapp
 - 23. "Opp"-knapp

Installasjon

I områder der høyden er mindre enn 2500 meter over havet, kan termostaten brukes ved full belastning. I områder med høyder fra 2500 meter til 4200 meter, bør effektratingen til den eksterne belastningen være mindre enn eller lik 80% av termostatens nominelle effekt.

ADVARSEL

a. Installasjonen må utføres av en autorisert elektriker.

b. Før installasionen må du forsikre deg om at den er i samsvar med lokale elektriske krav.

c. Når du installerer og rengjør termostaten, slå av strømforsyningen.

Tørk av overflaten for støv eller smuss med en myk klut eller et papirhåndkle, unngå bruk av vaskemiddel eller andre korrosive kjemiske løsninger.

For å sikre normal funksjon ved installasjon, må det matches med en standard vegg boks..

Ikke koble L&N eller LO&NO omvendt.

8. Interne romtemperatur

10. Gulvtemperatur

11. Regulatormodus

12. Oppvarmingsmodus

9. Eksterne romtemperatur

For å unngå skader, må du plassere og oppbevare dekslet forsiktig under installasionen.

Når den er koblet til AC230V, må overflatedekselet være installert. Ettersom termostaten ikke er en SELV-enhet, må alle deler med spenning betraktes som 230V.

Ledningsdiagram





Montering

Tekniske data

Inngang	230VAC+/-10%, 50/60Hz	
Maks. forhåndssikring	forhåndssikring 16A	
Innebygd bryter	1-pol, 16A	
Relékontakt:	Maks. 16A 250VAC	
Utgangsrelé	16A, SPST-NO	
Gulvsensortype / Ekstern romsensor	$\begin{array}{l} \mbox{Termostaten kan konfigureres med følgende typer gulvsensorer:} \\ \mbox{3m, NTC, R25=10K\Omega\pm1\%@25C, B25/50=3950K\pm1\%(standard) \\ \mbox{3m, NTC, R25=12K\Omega\pm2\%@25^{\circ}C, B25/85=3740K\pm2\%(statte) \\ \mbox{3m, NTC, R25=15K\Omega\pm2\%@25^{\circ}C, B25/85=3740K\pm2\%(statte) \\ \mbox{3m, NTC, R25=22K\Omega\pm2\%@25^{\circ}C, B25/85=3740K\pm2\%(statte) \\ \mbox{3m, NTC, R25=33K\Omega\pm2\%@25^{\circ}C, B25/85=4090K\pm1.5\%(statte) \\ \mbox{3m, NTC, R25=47K\Omega\pm2\%@25^{\circ}C, B25/85=409K\pm1.5\%(statte) \\ \mbox{3m, R25=47K\Omega\pm2\%@25^{\circ}C, B25/85=400K\pm1.5\%(statte) \\ \mbox{3m, R25=47K\Omega\pm2\%@25^{\circ}C, B25/85=400K\pm1.5\%(statte) \\ \mbox{3m, R25=47K\Omega\pm2\%%C, R25^{\circ}C, R25/85=400K\pm1.5\%(statte) \\ 3m, R25$	
Innebygd sensor	NTC, R25=10KΩ±1%@25°C, B25/50=3950K±1%	
Nettverksfunksjon:	Standard Zigbee 3.0-protokoll.	
Krav til ledningsnett	ledningsnett Strøm≤13A-1,5mm², fast kjerneledning, H07V-R-ledning Strøm>3A til 16A-2,5mm², fast kjerneledning, H07V-R-ledning	
Kontrollobjekt	Gulvvarme	
Monteringsmetode	Veggmontert	
Kontrollfunksjon	Termostaten har en innebygd sensor og leveres med en gulvsensor. Termostaten kan også kobles til en ekstern romsensor. Termostaten kan stilles inn for følgende funksjoner: Romtemperaturkontroll Gulvtemperaturkontroll Gulvsensoren kan brukes som en ekstern begrensningssensor for intern romtemperaturkontroll Gulvsensoren kan også brukes som en ekstern begrensningssensor for eksterne romtemperaturkontroll. Maksimale og minimale grensetemperature kan bli satt	
Kontrollmodus	①Manuell modus ②Ukentlig programmodus ③Regulator	
Frostbeskyttelse Standard 5°C for å starte frostbeskyttelse, 5-10°C kan kontroller slås på/av manuelt		
Omgivelsestemperatur	10°C/+60°C	
Eksterne begrensning	5~60°C (Standard 27°C)	
Bryteravvik	Justerbar 0,5-10°C (±1°C)	
Beskyttelsesnivå	IP20	
Materiale i foringsrøret PC Brannklassifisert		

Veiledning for normal drift

- 1. Kort trykk på 🕛 PÅ/AV-knappen for å slå PÅ/AV baklyset på termostatskjermen. Når det vises bon, betyr det at baklyset er PÅ, viser boFF betyr AV.
- 2. Langt trykk på UPÅ/AV-knappen i 3 sekunder for å slå PÅ/AV termostaten
- 3. Under manuell kontroll eller programmert kontrollmodus, kort trykk på "M"-knappen for å bytte modus.
- 4. Under oppvarming (ikke i regulator P-modus), langt trykk på "M" i 2 sekunder for a bytte fra modus **[** til modus **E [** .
- 5. I normal modus (ikke P-modus), kort trykk på "▲" eller "▼" for å justere gjeldende temperatur.
- 6. I programmert modus, kort trykk på "▲" eller "▼" for å justere den aktuelle tidsinnstillingstemperaturen og gå inn i midlertidig kontrollmodus.
- 7. I regulator P-modus, kort trykk på "▲" eller "▼" for å justere oppvarmingsprosenten for gjeldende modus, kort trykk på "M" for å bekrefte innstillingen.
- 8. Trykk og hold "M" og "**A**" i 3 sekunder samtidig under hovedskjermen i en hvilken som helst modus for å gå til innstilling av dato/tid.
- 9. Trykk og hold "M" og "A" i 3 sekunder samtidig under hovedskjermen i en hvilken som helst modus for å åpne/lukke barnesikringen.

Avanserte innstillinger;

Lar	igt trykk	pa "IVI"-knappen i	5 sekunder i hvilken som helst kontrollmodus
Kode vist		Betydning av koden	Kort trykk på *▲" eller *▼" for å velge, langt trykk på *M" i 1 sekund for å bekrefte, kort trykk på *M" for å avslutte
1	[Ar	Lufttemperaturk- alibrering	Sjekk lufttemperaturen og kalibreringen: -10-10°C (fabrikkinnstilling 0 °C)
2	CRF	Gulvtemperaturk- alibrering	Sjekk gulvtemperaturen og kalibreringen: -10-10°C (fabrikkinnstilling 0 °C)
3	ERE	External room temperature calibration	Mål og korrigere temperaturen i det eksterne rommet: -10-10°C (fabrikk 0°C)
4	SNod	Sensormodus	R A:Innebygd sensor F Gulvsensor (Fabrikkstandard) RF AF:Interne temperaturkontroll, gulvtemperaturgrense A2:Ekstern rommemperaturkontroll, gulvtemperaturgrense βF A2:Ekstern rommemperaturkontroll, gulvtemperaturgrense β A5:Internet emperaturkontroll, gulvtemperaturgrense βF A2:Ekstern rommemperaturkontroll, gulvtemperaturgrense β P:Kontroller Oppvarmingsprosent
5	SEn	Sensortyper	IDK: INTC_10K Fabrikkstandard I2K: IXC.12K I5K: ITC_15K 22K: ITC_15K 22K: ITC_21K 314: 315: 314: 315: 314: 315: 314: 315: 314: 315:
6	br l	Visningens baklysets lysstyrke i arbeidsstatus	10-100%, økning med 10%, tilbakestille fabrikkinnstillingene 100%
7	Ъгд	Visningens bakgrunnsbelysningens lysstyrke i standby-statu	10-100%, økning med 10%, tilbakestille fabrikkinnstillingene 10%
8	FLE	Begrenset gulvtemperatur	5-60°C, fabrikkinnstilling 27°C
9	dı F	PÅ/AV differensial	0,5-10°C, fabrikkinnstilling ±1°C
10	Pr6	Innstilling av ukentlig program	Pr6 12345/67: 5/2 (Blinker vekselvis) Pr63 123456/7: 6/1 (Blinker vekselvis) Pr63 1234567: 7/0 (Blinkende) Ingen hvile Pr64 1234567 Alle vises: Alle hviler
11	LEP	Frostbeskyttelse	oFF AV: Frostbeskyttelse AV (standard) Når den er aktivert: 5-10°C
12	rE6E	Regulator	AV: Slå regulatoren av 1-30 minutter innstillbar tidsplan for oFF oppvarming Totalt kan 30 tidsplaner bli satt. (standard 30 minutter)
13	RdRP	Selvjustering	AV: Selvtilpassingsfunksjon AV PÅ: Selvtilpassingsfunksjon PÅ (Fabrikkstandard AV)
14	RLo	Nedre grense for luftsensorstemperatur	0,5-38°C (fabrikkinnstilling 5°C)
15	RH,	Øvre grense for luftsensorstemperatur	2,5-40°C (fabrikkinnstilling 40°C)
16	FLo	Nedre grense for gulvsensortemperatur	0,5- 38°C (fabrikkinnstilling 5°C)
17	FH,	Øvre grense for gulvsensortemperatur	2,5-40°C (fabrikkinnstilling 40°C)
18	ELo	Nedre grense for eksterne romsensortemperatur	0,5-38°C (fabrikkinnstilling 5°C)
19	EH,	Øvre grense for eksterne romsensortemperatur	2,5-40°C (fabrikkinnstilling 40°C)
20	nEt	Aktiver Zigbee i nettverks- / frakoblet modus	Zigbee inkludering: Sørg for at enheten ikke tilhører noe nettverk. Gå til avanserte innstillinger og finn alternativet - og langt trykk på M-knappen 12 sekunder for å forberede inkludering. Samtidig, sett Zigbee-kontrolleren din i inkluderingstatus. Hvis skjermen viser, betyr det at enheten er i inkluderingstatus. Hvis skjermen viser - ,, og Zigbee-logoen ● er på, betyr det at inkluderingen var vellykket. Hvis skjermen viser F.cr., betyr det at inkluderingen var vellykket. Hvis skjermen viser F.cr., betyr det at inkluderingen var vellykket. Hvis skjermen viser F.cr., betyr det at inkluderingen var vellykket. Hvis "For Homey Inkludering, trykk "M"-knappen to ganger for å kunne inkludere. Zigbee ekskludering: Gå til avanserte innstillinger, finn alternativetølkog trykk på M-knappen i 2 sekunder for å forberede ekskludering. Samtidig, set Zigbee-kontrolleren din i ekskluderingsmodus. Når skjermen viser f.CL, og Zigbee-logoen @ rav, betyr det at ekskluderingen mislyktet. Hvis skjermen viser F.r., betyr det at ekskluderingen mislyktes.
21	YNod	Driftsmodus Arbeidsmodus	LooL COOL: Kjølemodus KERL HEAT: Oppvarmingsmodus (Fabrikkstandard)
22	dREE	Datovisningsmodus	ddnn DDMM: Dag dag/måned måned (fabrikkinnstilling) nndd MMDD: Måned måned/dag dag
23	Ydo	Åpne vindufunksjonen	oFF Deaktiver åpne vindufunksjonen an Aktiver åpne vindufunksjonen (Fabrikkstandard)
24	FRE	Tilbakestille fabrikkinnstillingene	I alternativet, langt trykk på "M" i 5 sekunder for å gå tilbakestille fabrikkinnstillingene.
	ESE	Avslutt avanserte	Kort trykk på "M" for å bekrefte og avslutte
25		ii ii isuliii igoi	