

BRUKSANVISNING
INSTRUCTION MANUAL
J&EL Varmevite 1500W

J&EL


220-240V~ 50-60Hz 1500W




220-240v~50-60Hz
Maks effekt - 1500w
3 effekt nivåer
Mekanisk termostat
Veltesikring
1,6m kabel m/plugg

220-240V~ 50/60Hz
1500W
3 power level
Mechnical thermostat
Tip-over switch
1.6meter cable

MÅL / MEASURES

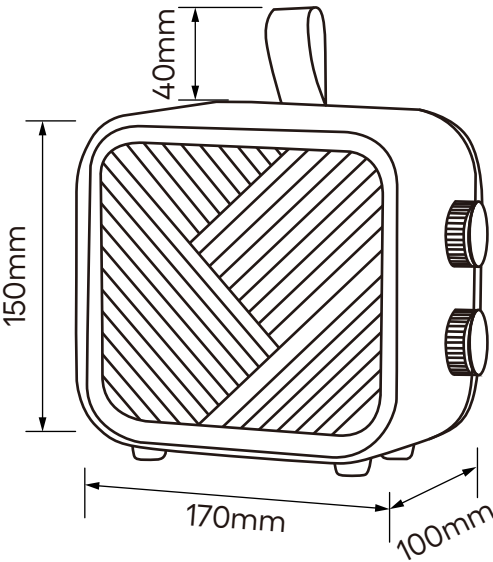

MÅL / Control panel

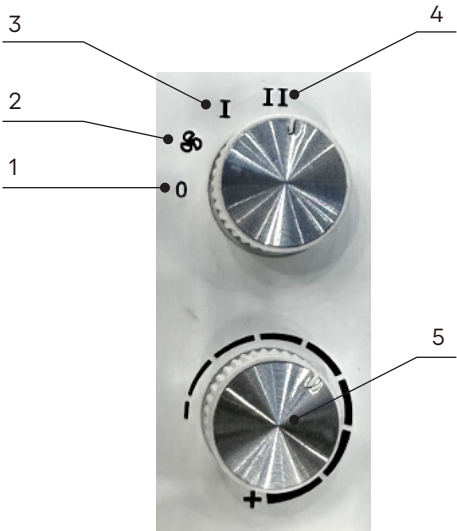

- | | |
|--------------------------|---------------------------------|
| 1. Vifte og varme er av. | 1. Off |
| 2. Kun vifte | 2. Ventilation |
| 3. Vifte og lav effekt | 3. Ventilation low temperature |
| 4. Vifte og høy effekt | 4. Ventilation high temperature |
| 5. Mekanisk termostat | 5. Mechanical thermostat |

