

BRUKSANVISNING
INSTRUCTION MANUAL
Comfort PTC varmekifte 2000W

J&EL

220-240V~ ,50-60Hz 2000W



Driftspenning:	220-240V, 50-60 Hz	Operating voltage:	220-240V~, 50-60 Hz
Maks effekt:	2000W	Maximum power:	2000W
2 effektnivåer:	1100W/2000W	2 power levels:	1100W/2000W
Elektronisk termostat:	Ja	Electronic thermostat:	Yes
Timer:	Ja	Timer:	Yes
Veltesikring:	Ja	Tip-over protection:	Yes
Overopphetingsbeskyttelse:	Ja	Overheating protection:	Yes
Barnesikring:	Ja	Child lock:	Yes
Produktet kommer med 1,6m kabel m/plugg.		The product comes with a 1,6m cable with plug.	

Drift / Operation

1. Kontrollpanel

2. LED-display

3. Luftutløp

4. Sokkel

5. Integrert skjult håndtak

6. Luftinntak

7. Strømkabel
1. Control Panel

2. LED display screen


3. Air Outlet

4. Base


5. Built-in Hidden Recessed Handle

6. Air Inlet

7. Power Cord

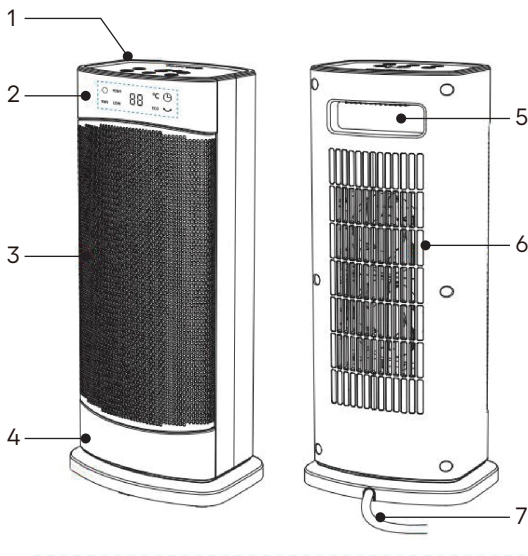

Mål / Measures

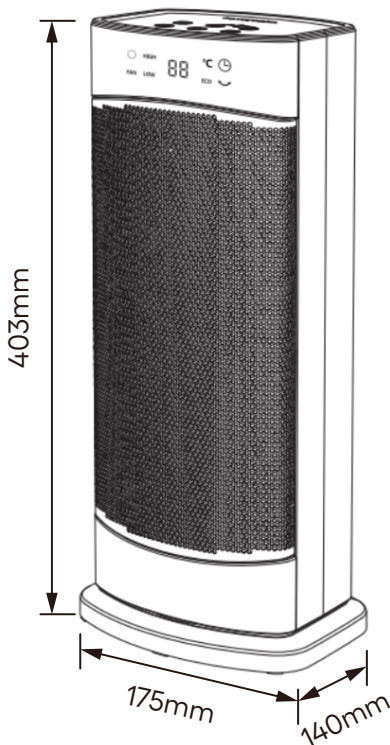

BRUKSANVISNING

Les bruksanvisningen nøye og oppbevar den for fremtidig referanse. Plasser varmeovnen på et stabilt, plant og åpent underlag uten hindringer, og minst 1 meter fra vegger eller brennbare materialer. Koble til en jordet stikkontakt (220–240V~).

Hvis støpselet sitter løst, kan det delvis eller helt gli ut ved små bevegelser i kabelen. Løse stikkontakter kan overopphetes og utgjøre en alvorlig brannfare, spesielt dersom de er dekket av gardiner eller lignende materialer.

Sørg for at støpselet sitter godt i stikkontakten.

Bruk

1. Koble til ovnen i en jordet stikkontakt. Strømindikatoren tennes. (Rød diode)
2. Trykk på power knappen  for å starte produktet. Displayet viser romtemperaturen, og «°C» lyser i display. Varmeovnen starter på høyeste innstilling (High - 35°C)
3. Trykk på modusknappen  for å bytte mellom følgende moduser: HIGH → LOW → ECO → FAN

Moduser

HIGH – «HIGH» lyser i display, og romtemperaturen vises i display.

Maks 2000w effekt.

LOW – «LOW» lyser i display, og romtemperaturen vises i display.

Maks 1100w effekt.

ECO –

- Ved romtemperatur under 18 °C: høy varmeeffekt (Maks 2000w)
- Ved romtemperatur mellom 18 °C og 25 °C: lav varmeeffekt (Maks 1100W)
- Ved romtemperatur over 25 °C: viftemodus aktiveres og PTC-varmeelementet slutter å varme

FAN – Kun viftemodus

Innstillinger

Når power knappen trykkes inn, starter enheten med de siste innstillingene ovnen hadde før avslåing, med unntak av barnesikring og timer.

Etter at strømmen har vært frakoblet, starter enheten med standard oppstartsinnstillinger.

Standardinnstilling ved oppstart er høy varmeeffekt. (High - 35°C)

Enheden har ikke minnefunksjon ved strømbrudd.

Temperaturinnstilling

Trykk på «+» for å øke temperaturen (15–35 °C, 1 °C per trykk). Hold knappen inne for hurtigjustering.

Trykk på «-» for å redusere temperaturen (15–35 °C, 1 °C per trykk).

Hold knappen inne for hurtigjustering.

Timerinnstilling

Trykk på timerknappen  . «00» vises i displayet, og  indikatoren tennes.

Trykk på «+» for å stille inn fra 0 til 24 timer (1 time per trykk). Hold knappen inne for hurtigjustering.

Trykk på «-» for å redusere tiden fra 24 til 0 timer (1 time per trykk).

Hold knappen inne for hurtigjustering.

Barnesikring

Hold «+» og «» inne samtidig i 3 sekunder for å aktivere barnesikring. Displayet viser «LC».

For å deaktivere barnesikringen, hold «+» og «» inne samtidig i 3 sekunder igjen. Displayet viser «nu».

Når barnesikringen er aktivert, fungerer kun strømknappen. Alle andre knapper er låst.

Andre funksjoner

Trykk på oscillasjonsknappen  for å starte rotasjon. Trykk igjen for å stoppe.

Når produktet er i drift, dimmes indikatorene til 30 % lysstyrke etter 30 sekunder uten berøring. Kun strømindikatoren forblir tent.

Avslåing

Trykk på strømknappen for å slå av produktet. Viften fortsetter å gå i 30 sekunder for å kjøle ned varmeelementet, før enheten slås helt av. Koble deretter fra strømforsyningen. Strømindikatoren slukkes.

INSTRUCTION MANUAL

Read the user manual carefully and keep it for future reference.

Place the heater on a stable, flat and open surface without obstructions, at least 1 meter away from walls or flammable materials. Connect to a grounded power outlet (220–240V~).

If the plug is loose, it may partially or completely slip out with small movements in the cable. Loose outlets may overheat and pose a serious fire hazard, especially if covered by curtains or similar materials.

Make sure the plug is firmly inserted into the outlet.

Use

1. Plug the heater into a grounded outlet. The power indicator lights up. (Red diode)
2. Press the power button  to start the product. The display shows the room temperature, and "°C" lights up in the display. The heater starts at the highest setting (High - 35°C)
3. Press the mode button  to switch between the following modes: HIGH → LOW → ECO → FAN

Modes

HIGH – "HIGH" lights up in the display, and the room temperature is shown. Max 2000 W output.

LOW – "LOW" lights up in the display, and the room temperature is shown. Max 1100 W output.

ECO –

- At room temperature below 18 °C: high heat output (Max 2000 W)
- At room temperature between 18 °C and 25 °C: low heat output (Max 1100 W)
- At room temperature above 25 °C: fan mode is activated and the PTC heating element stops heating

FAN – Fan mode only

Settings

When the power button is pressed, the unit starts with the last settings used before shut-off, except for child lock and timer.

After power has been disconnected, the unit starts with default startup settings.

The default setting at startup is high heat output. (High - 35°C)

The unit does not have a memory function in case of power failure.

Temperature setting

Press "+" to increase the temperature (15–35 °C, 1 °C per press). Hold the button for fast adjustment.

Press "-" to decrease the temperature (15–35 °C, 1 °C per press). Hold the button for fast adjustment.

Timer setting

Press the timer button  . "00" appears in the display, and the  indicator lights up.

Press "+" to set the time from 0 to 24 hours (1 hour per press). Hold the button for fast adjustment.

Press "-" to reduce the time from 24 to 0 hours (1 hour per press). Hold the button for fast adjustment.

Child lock

Press and hold "+" and "" simultaneously for 3 seconds to activate the child lock. The display shows "LC".

To deactivate the child lock, press and hold "+" and "" simultaneously again for 3 seconds. The display shows "nu".

When the child lock is activated, only the power button works. All other buttons are locked.

Other functions

Press the oscillation button  to start rotation. Press again to stop.

When the product is in operation, the indicators dim to 30% brightness after 30 seconds without interaction. Only the power indicator remains lit.

Shut-off

Press the power button to turn off the product. The fan continues to run for 30 seconds to cool down the heating element before the unit switches off completely.

Then disconnect the power supply. The power indicator turns off.

Sikkerhetssystemer

Overopphetingsbeskyttelse

Denne varmeovnen er utstyrt med overopphetingsbeskyttelse som automatisk slår av enheten dersom deler av varmeovnen blir for varme. La enheten kjøle seg ned før normal drift gjenopptas.

Beskyttelse ved for høy temperatur

Når omgivelsestemperaturen overstiger 50 °C, stopper oppvarmingen og summeren avgir alarm med 1 sekunds intervall kontinuerlig til strømmen kobles fra. All strømforsyning til ovnen slås umiddelbart av. Etter at sikkerhetsbeskyttelsen er aktivert, må enheten startes på nytt, og temperaturen må være under 50 °C før produktet kan brukes igjen.

Veltesikring

Varmeovnen er utstyrt med veltesikring som automatisk slår av enheten dersom den velter fremover eller bakover. Når enheten settes tilbake i oppreist stilling, starter den automatisk igjen. Dette er en sikkerhetsfunksjon for å redusere risikoen for brann dersom produktet velter ved et uhell.

Automatisk avstengning etter 24 timer

Dersom enheten er i kontinuerlig drift i 24 timer, avgir summeren alarm med 1 sekunds intervall, og strømindikatoren blinker med en frekvens på 1 Hz.

Etter 1 minutt slås enheten automatisk av. Displayet slukkes fullstendig, og både varmeelement og vifte stopper samtidig.

Strømindikator (Rød diode)

Varmeovnen er utstyrt med strømindikator. Indikatoren lyser når produktet er koblet til strøm.

Rengjøring og vedlikehold

Før rengjøring må du kontrollere følgende:

1. Varmeovnen er slått AV.
2. Strømforsyningen er koblet fra ved å trekke støpselet ut av stikkkontakten.

Regelmessig rengjøring:

1. Støv inni enheten kan fjernes med støvsuger og smalt munnstykke.
2. Ikke bruk rengjøringsspray eller kjemikalier på produktet.
3. Rengjør kabinettet med en myk, lett fuktet klut. Tørk forsiktig bort smuss fra overflaten. Pass på at varmeelement og brytere ikke blir våte. La enheten tørke helt før bruk.

Oppbevaring

1. Utfør rengjøring som beskrevet i avsnittet «Rengjøring og vedlikehold».
2. Tørk alle deler grundig.
3. Pakk varmeovnen i en plastpose og oppbevar den på et kjølig og tørt sted.

Safety systems

Overheating protection

This heater is equipped with overheating protection that automatically switches off the unit if parts of the heater become too hot. Allow the unit to cool down before resuming normal operation.

High temperature protection

When the ambient temperature exceeds 50 °C, heating stops and the buzzer emits an alarm at 1-second intervals continuously until the power is disconnected. All power supply to the heater is immediately cut off.

After the safety protection is activated, the unit must be restarted, and the temperature must be below 50 °C before the product can be used again.

Tip-over protection

The heater is equipped with tip-over protection that automatically switches off the unit if it tips forward or backward. When the unit is returned to an upright position, it restarts automatically. This is a safety feature to reduce the risk of fire if the product tips over accidentally.

Automatic shut-off after 24 hours

If the unit operates continuously for 24 hours, the buzzer emits an alarm at 1-second intervals, and the power indicator flashes at a frequency of 1 Hz.

After 1 minute, the unit turns off automatically. The display turns off completely, and both the heating element and fan stop simultaneously.

Power indicator (Red diode)

The heater is equipped with a power indicator. The indicator lights up when the product is connected to power.

Cleaning and maintenance

Before cleaning, check the following:

1. The heater is turned OFF.
2. The power supply is disconnected by unplugging the cord from the outlet.

Regular cleaning:

1. Dust inside the unit can be removed with a vacuum cleaner and a narrow nozzle.
2. Do not use cleaning sprays or chemicals on the product.
3. Clean the housing with a soft, slightly damp cloth. Carefully wipe dirt from the surface. Make sure the heating element and switches do not get wet. Allow the unit to dry completely before use.

Storage

1. Perform cleaning as described in the section “Cleaning and maintenance”.
2. Dry all parts thoroughly.
3. Pack the heater in a plastic bag and store it in a cool and dry place.