



# Assembly Guide for LexCom® Home WB Connector

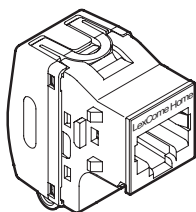

## Application


The connector is applied for LexCom Home cable.

①

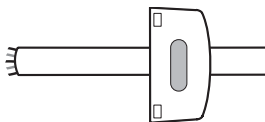


Put the shielding cap on the cable.

②

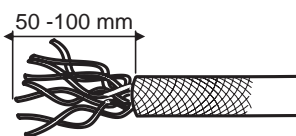

Strip the cable, remove the foil, and pull the cable screen braid backwards along the cable jacket.

③

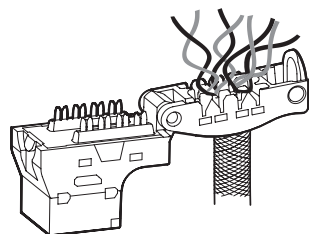


Guide the stripped cable into the open stuffercap, and press it fully into the funnel/guide.

④




Pull each pair down into the stuffercap's grooves without untwisting the pairs. The pairs are allocated according to the colour code.

⑤

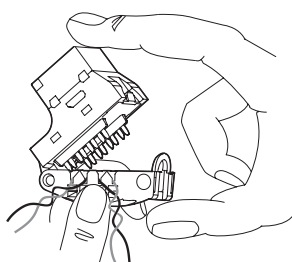


Close the stuffercap by pressing it firmly until you hear a "CLICK".

⑥

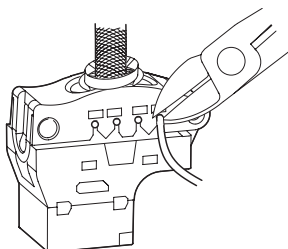


Cut off the conductors right up to the stuffercap (max 1 mm).

⑦

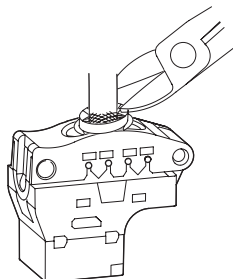


Cut off the cable screen braid right up to the cable fix.

⑧

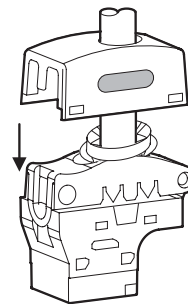


Apply the cap. Secured after "CLICK".

**In the event of a fault, the connectors can be re-terminated:**

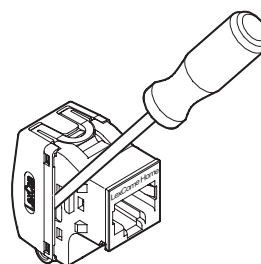

Snap off the cap by means of a screwdriver.



To ensure optimal shielding performance the cable ferrule should be replaced (Article no. 30 658 0034).